


AIR BAG FRONT RH SENSOR REPLACEMENT

600MY-01

HINT:

COMPONENTS: See page 60-35

1. **PRECAUTION** (See page 60-1)
2. **SEPARATE BATTERY NEGATIVE TERMINAL** (See page 60-1)

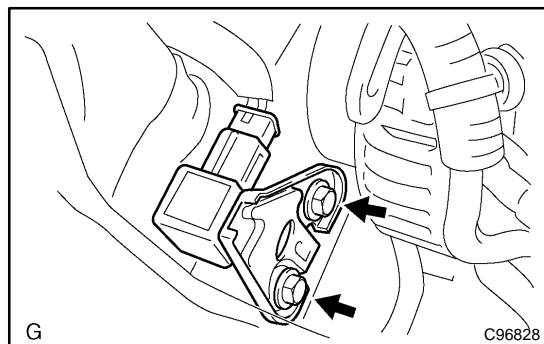

3. **REMOVE AIR BAG FRONT RH SENSOR**
 - (a) Remove the 2 bolts and airbag front RH sensor.
 - (b) Disconnect the connector from the airbag front RH sensor.

4. INSTALL AIR BAG FRONT RH SENSOR

- (a) Check that the ignition switch is off.
- (b) Check that the battery negative (–) terminal is disconnected.

NOTICE:

After removing the terminal wait for at least 90 seconds before starting the operation.

- (c) Install the airbag front RH sensor with the 2 bolts.

Torque: 17.5 N·m (178 kgf·cm, 13 ft·lbf)

NOTICE:

- If the airbag front RH sensor has been dropped, or there are any cracks, dents or other defects in the case, bracket or connector, replace the airbag front RH sensor with a new one.
 - When installing the airbag front RH sensor, be careful that the SRS wiring does not interfere with other parts and is not pinched between other parts.
- (d) Connect the connector to the airbag front RH sensor.
 - (e) Check that there is no looseness in the installation parts of the airbag front RH sensor.
5. **INSPECT SRS WARNING LIGHT** (See page 05-451)