



## REPLACEMENT

1. **PRECAUTION** (See page 60-1)
2. **SEPARATE BATTERY NEGATIVE TERMINAL** (See page 60-1)

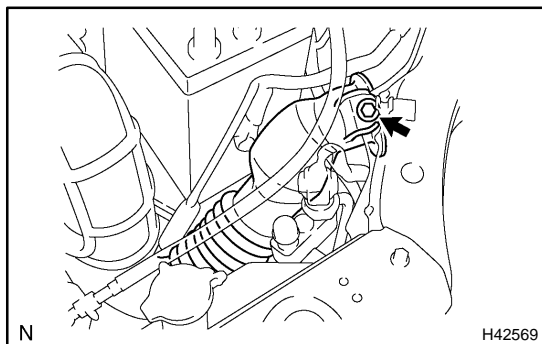

3. **REMOVE AIR CLEANER INLET NO.1**
  - (a) Remove the bolt and air cleaner inlet No.1.

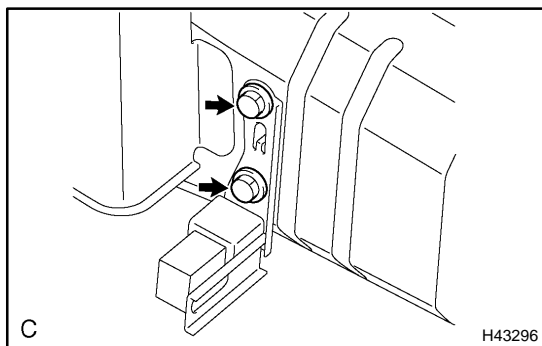

4. **REMOVE AIR BAG SENSOR FRONT LH**
  - (a) Remove the 2 bolts and airbag sensor front LH.
  - (b) Disconnect the connector from the airbag sensor front LH.

### 5. INSTALL AIR BAG SENSOR FRONT LH

- (a) Check that the ignition switch is off.
- (b) Check that the battery negative (–) terminal is disconnected.

#### NOTICE:

After removing the terminal wait for at least 90 seconds before starting the operation.

- (c) Install the airbag sensor front LH with the 2 bolts.

**Torque: 17.5 N·m (178 kgf·cm, 13 ft·lbf)**

#### NOTICE:

- If the airbag sensor front LH has been dropped, or there are any cracks, dents or other defects in the case, bracket or connector, replace the airbag sensor front LH with a new one.
  - When installing the airbag sensor front LH, be careful that the SRS wiring does not interfere with other parts and is not pinched between other parts.
- (d) Connect the connector to the airbag sensor front LH.
  - (e) Check that there is no looseness in the installation parts of the airbag sensor front LH.

### 6. INSTALL AIR CLEANER INLET NO.1

- (a) Install the air cleaner inlet No.1 with the bolt.

**Torque: 7.5 N·m (76 kgf·cm, 66 in·lbf)**

7. **INSPECT SRS WARNING LIGHT** (See page 05-451)